



DIRECT+ Conditioning System



ENVOY



AUTHORITY22

Pattern Information

Date, Pattern Type, Pattern Difficulty, Pattern Designer, Pattern Volume (ml) 20,49

Surface Information

Surface Type Synthetic, Surface Brand Brunswick Pro Lane, Age 0

Pattern Parameters

Pattern Number, Pattern Name Champion Door Open, Mode Clean & Oil, Forward Speed Max Clean, Start Cleaner Spray 0, Start Squeegee 0, Start Oiling 6, Split Pattern

Supplies Information


Lane Cleaner, Cleaner Mixture Ratio : 1, Cleaner Transition Distance 57 Authority22, Cleaner Spray End Distance 53 Envoy

Lane Conditioner

Notes

Table with 8 columns (Zone 1-8) and 3 rows (Zone End Distance, Zone Ratio L/R, Zone Volume (ml)).

Zone layout table with columns for 7 Pin Side, Board Number, and 10 Pin Side, and rows for Zones 1-8.

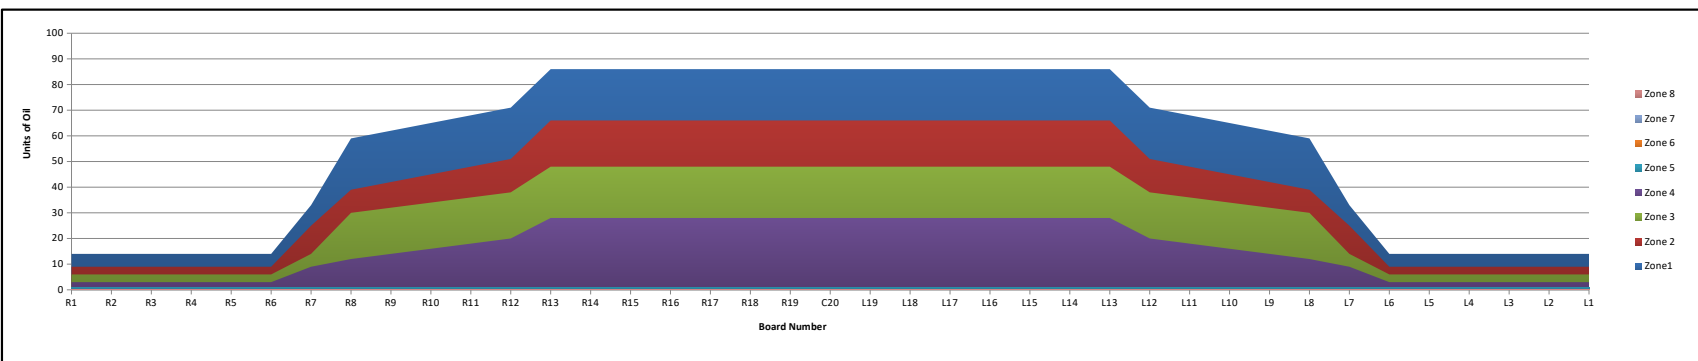



Champion Door Open

Crosswise Ratios (by units)

Zone 1	Average	Ratio
3L-7L Left =	17,8	4,8
3R-7R Right=	17,8	4,8
18L-18R Center =	86,0	

Zone 2	Average	Ratio
3L-7L Left =	12,2	5,4
3R-7R Right=	12,2	5,4
18L-18R Center=	66,0	

Zone 3	Average	Ratio
3L-7L Left =	7,6	6,3
3R-7R Right=	7,6	6,3
18L-18R Center=	48,0	

Zone 4	Average	Ratio
3L-7L Left =	4,2	6,6
3R-7R Right=	4,2	6,6
18L-18R Center =	28,0	

Zone 5	Average	Ratio
3L-7L Left =	1,0	1,0
3R-7R Right=	1,0	1,0
18L-18R Center=	1,0	

Zone 6	Average	Ratio
3L-7L Left =	#JAKO/0!	#JAKO/0!
3R-7R Right=	#JAKO/0!	#JAKO/0!
18L-18R Center=	#JAKO/0!	

Zone 7	Average	Ratio
3L-7L Left =	#JAKO/0!	#JAKO/0!
3R-7R Right=	#JAKO/0!	#JAKO/0!
18L-18R Center =	#JAKO/0!	

Zone 8	Average	Ratio
3L-7L Left =	#JAKO/0!	#JAKO/0!
3R-7R Right=	#JAKO/0!	#JAKO/0!
18L-18R Center=	#JAKO/0!	

Crosswise Ratios (by ml)

Zone 1	Average	Ratio
3L-7L Left =	0,060	4,8
3R-7R Right=	0,060	4,8
18L-18R Center =	0,288	

Zone 2	Average	Ratio
3L-7L Left =	0,051	5,4
3R-7R Right=	0,051	5,4
18L-18R Center=	0,277	

Zone 3	Average	Ratio
3L-7L Left =	0,029	6,3
3R-7R Right=	0,029	6,3
18L-18R Center=	0,181	

Zone 4	Average	Ratio
3L-7L Left =	0,014	6,6
3R-7R Right=	0,014	6,6
18L-18R Center =	0,094	

Zone 5	Average	Ratio
3L-7L Left =	0,000	#JAKO/0!
3R-7R Right=	0,000	#JAKO/0!
18L-18R Center=	0,000	

Zone 6	Average	Ratio
3L-7L Left =	0,000	#JAKO/0!
3R-7R Right=	0,000	#JAKO/0!
18L-18R Center=	0,000	

Zone 7	Average	Ratio
3L-7L Left =	0,000	#JAKO/0!
3R-7R Right=	0,000	#JAKO/0!
18L-18R Center =	0,000	

Zone 8	Average	Ratio
3L-7L Left =	0,000	#JAKO/0!
3R-7R Right=	0,000	#JAKO/0!
18L-18R Center=	0,000	

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

