

Brunswick®



Official Lane Maintenance and Capital Equipment Provider

DIRECT+

Conditioning System



ENVOY



AUTHORITY22®

Select Machine

Pattern Information

Date
 Pattern Type
 Pattern Difficulty
 Pattern Designer
 Pattern Volume (ml)

Surface Information

Surface Type
 Surface Brand
 Age

Pattern Parameters

Pattern Number
 Pattern Name
 Mode
 Forward Speed
 Start Cleaner Spray
 Start Squeegee
 Start Oiling
 Split Pattern

Supplies Information

Lane Cleaner
 Cleaner Mixture Ratio
 Cleaner Transition Distance Authority22
 Cleaner Spray End Distance Envoy

Lane Conditioner

Notes

Zone	1	2	3	4	5	6	7	8
Zone End Distance	7	20	30	35	40			
Zone Ratio	L 2,7 : 1 R 2,7 : 1	L 2,7 : 1 R 2,7 : 1	L 3,8 : 1 R 3,8 : 1	L 4,3 : 1 R 4,3 : 1	L 1,0 : 1 R 1,0 : 1	L ### : 1 R ### : 1	L ### : 1 R ### : 1	L ### : 1 R ### : 1
Zone Volume (ml)	7,63	6,89	3,42	1,08	0,00	0,00	0,00	0,00

ZONE	7 Pin Side																Board Number														10 Pin Side															
	L1	L2	L3	L4	L5	L6	L7	L8	L9	L10	L11	L12	L13	L14	L15	L16	L17	L18	L19	C20	R19	R18	R17	R16	R15	R14	R13	R12	R11	R10	R9	R8	R7	R6	R5	R4	R3	R2	R1							
1	10	15	20	25	30	35	55	75	90	90	90	90	90	90	90	90	90	90	90	90	90	90	90	90	90	90	90	90	90	90	90	75	55	35	30	25	20	15	10							
2	6	6	9	12	16	21	25	30	35	45	45	45	45	45	45	45	45	45	45	45	45	45	45	45	45	45	45	45	45	45	35	30	25	21	16	12	9	6	6							
3	4	4	4	4	4	10	17	21	25	30	30	30	30	30	30	30	30	30	30	30	30	30	30	30	30	30	30	30	30	30	25	21	17	10	4	4	4	4	4							
4	2	2	2	2	2	6	11	14	17	20	20	20	20	20	20	20	20	20	20	20	20	20	20	20	20	20	20	20	20	20	17	14	11	6	2	2	2	2	2							
5	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1								
6																																														
7																																														
8																																														

